

**"6"**

# **Illustrated Parts List**

## **MODEL SERIES**

**"6"—"6F"—"6FB"—"6FBC"  
"6FBP"—"6R4D"—"6R-6"**

•

### **HOW TO FIND THE CORRECT NUMBER OF THE PART YOU NEED**


These instructions are to be followed when using a Parts List to determine the correct part for an engine.

• • • • •

- A. Refer to Engine Model, Type and Serial Number that is stamped on the blower housing or name plate of engine. Then use the Illustrated Parts List covering this Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Master Part Numbers are listed. **THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE"**.
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type Number is listed under "Note", order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.


PRINTED IN U.S.A. BASCO



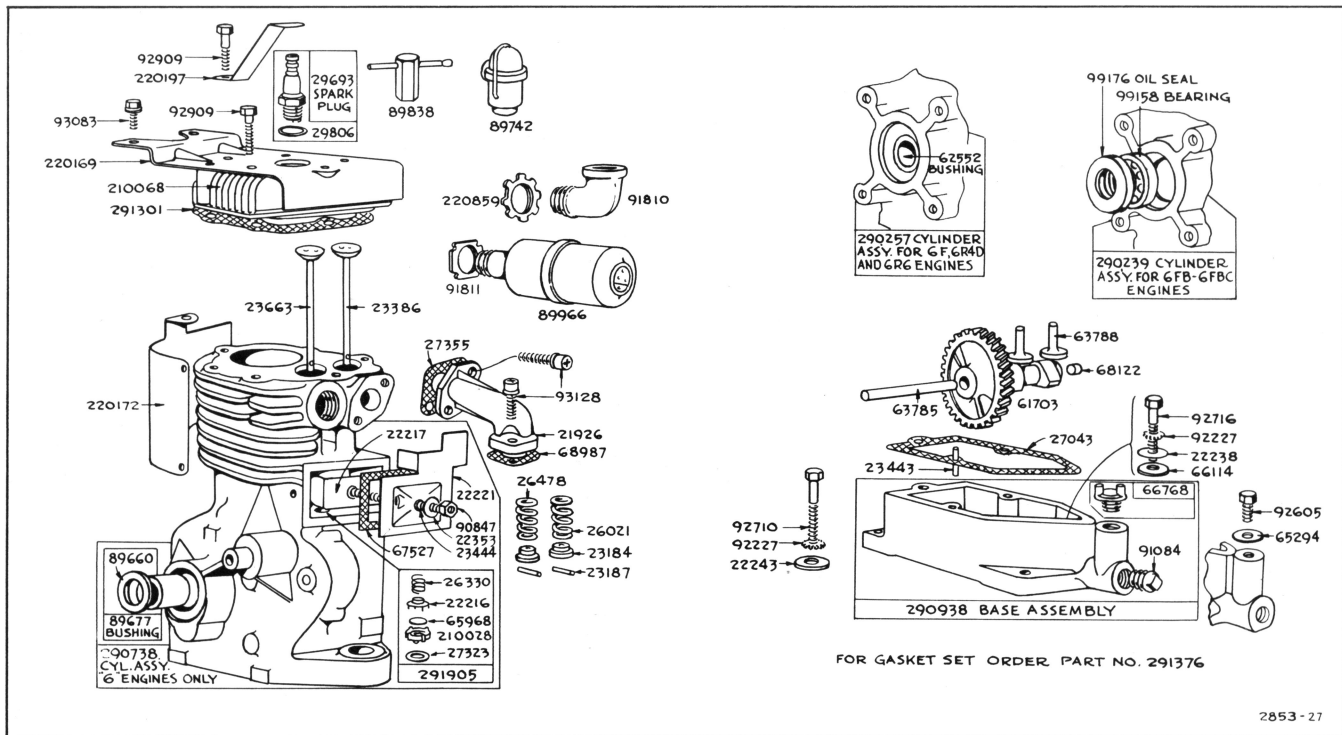


### CYLINDER AND BASE PARTS

Assemblies include all parts shown in frames.

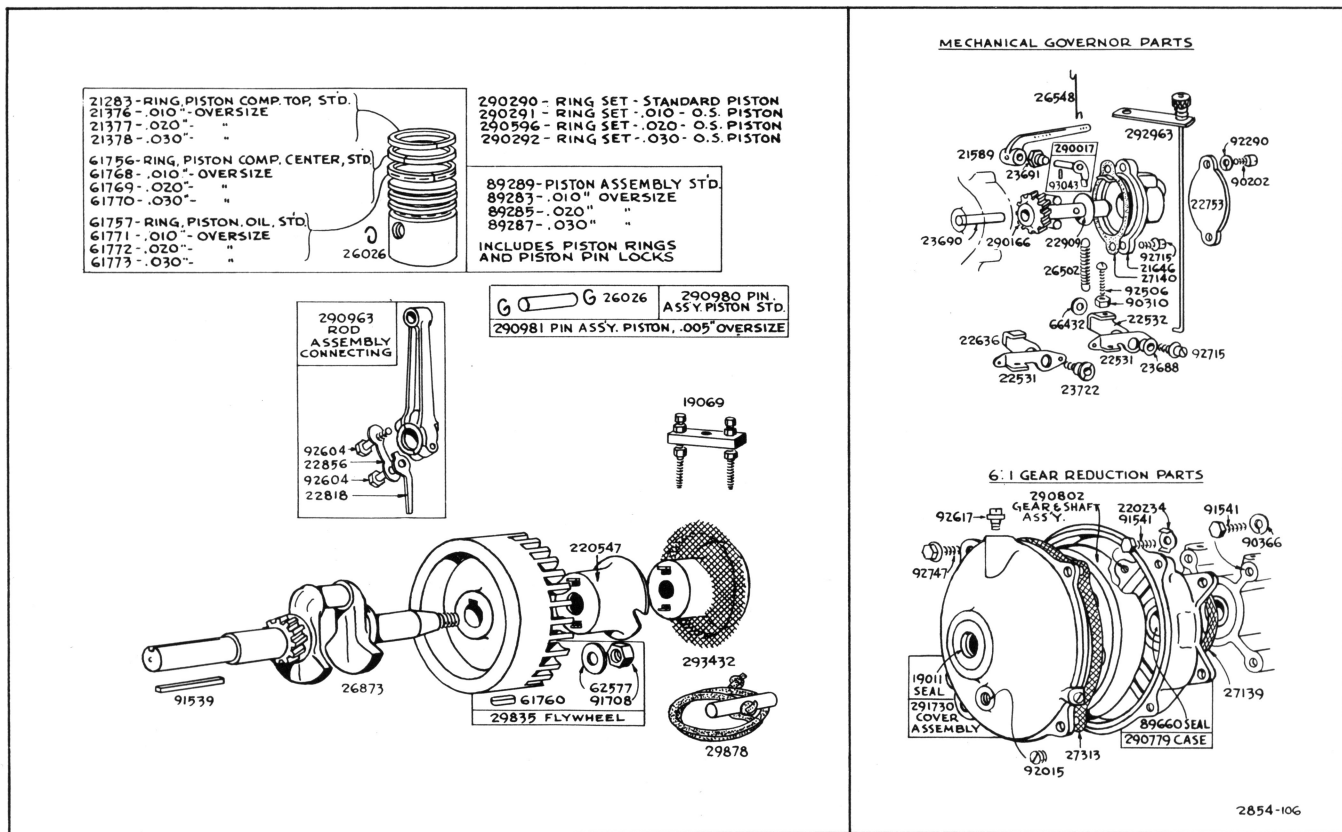


### PISTON, CONNECTING ROD, FLYWHEEL, MECHANICAL GOVERNOR, AND GEAR REDUCTION PARTS

Assemblies include all parts shown in frames.

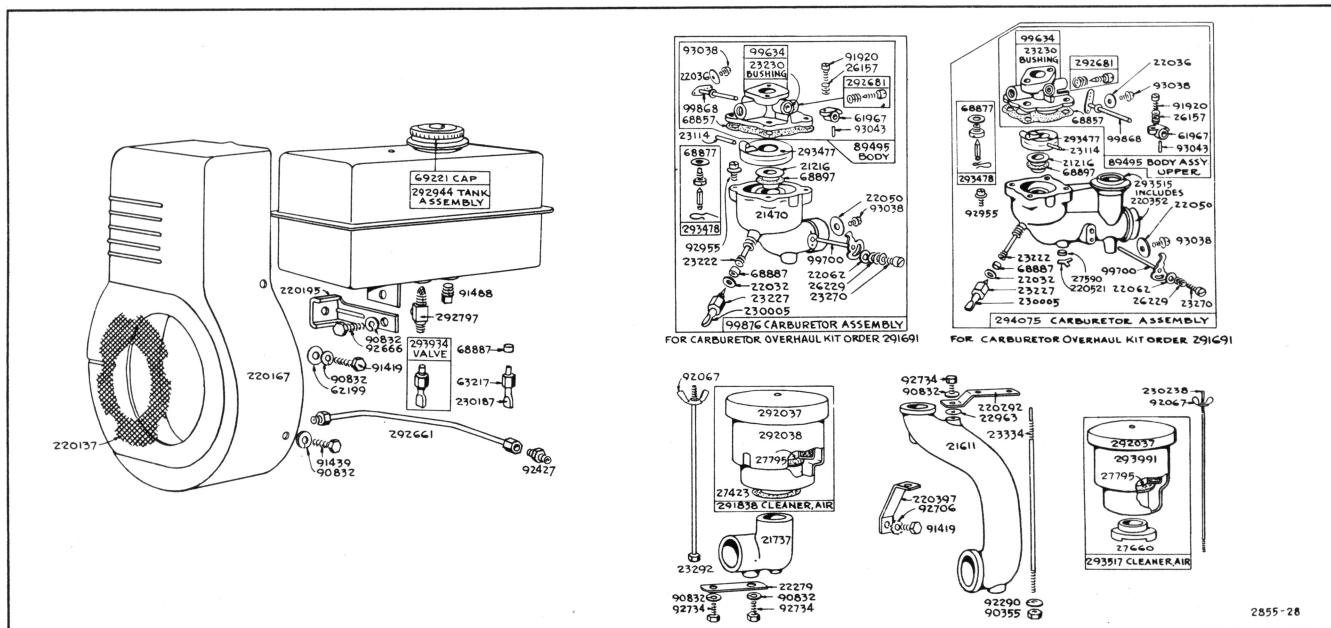


### FUEL SYSTEM AND BLOWER HOUSING PARTS

Assemblies include all parts shown in frames.

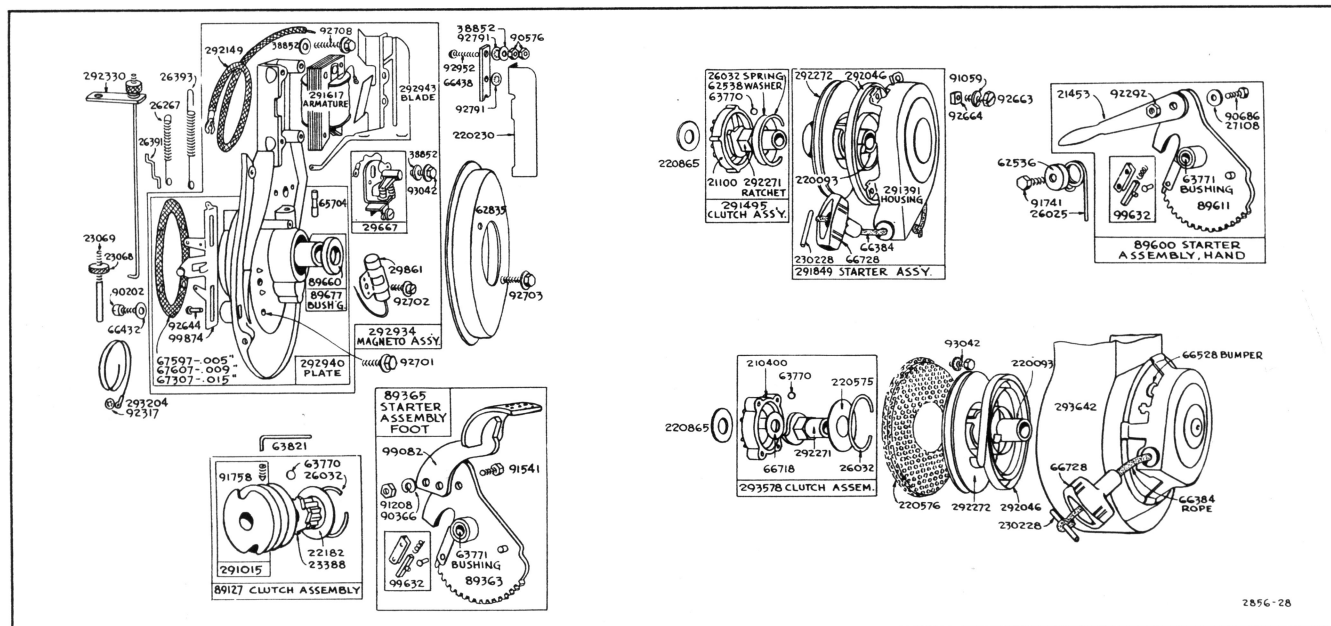

### MAGNET AND STARTER PARTS

Assemblies include all parts shown in frames.

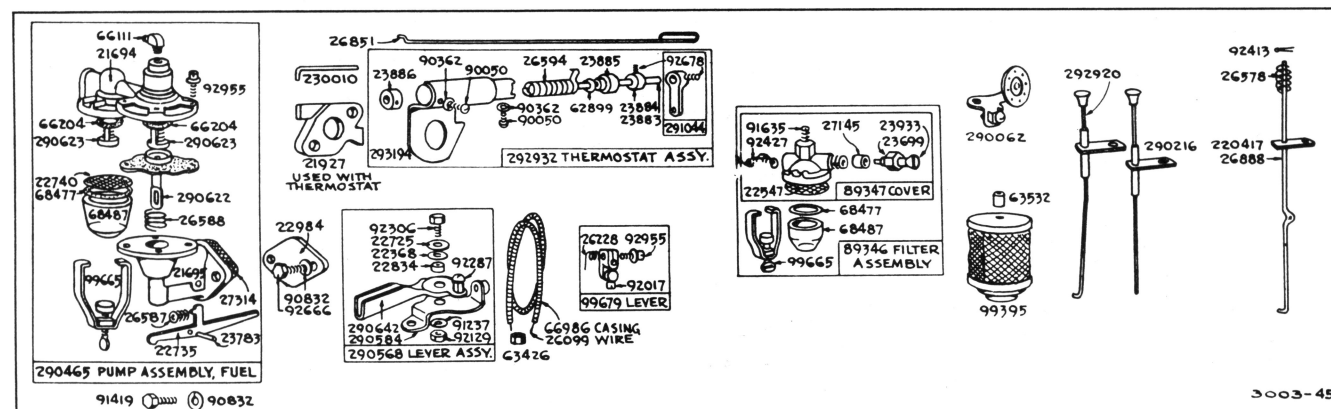

### ACCESSORIES FOR FUEL SYSTEM

Assemblies include all parts shown in frames.

# NUMERICAL PARTS LIST

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
19011	Seal – Oil	21695	Body – Fuel Pump	<b>Note:</b> 62876 Screen – Fuel Filter Used on type No. 105901.	
19069	Puller – Flywheel (Optional Accessory)	21737	Elbow – Air Cleaner	22636	Stop – Governor Lever
21109	Housing – Starter Clutch	<b>Note:</b> 210351 Elbow – Air Cleaner Used on type Nos. 105106, 105159, 105163, 105180, 105193, 105200, 105204, 105205, 105212, 105898, 106034. Uses: 66518 Tubing – Vent 230252 Fitting – Air Cleaner Pipe		22725	Washer – Control Lever
21216	Venturi – Carburetor	210351	Elbow – Air Cleaner	22735	Lever – Fuel Pump
21283	Ring – Piston, Compression, Top – Standard	Used on type No. 105885. Uses: 23699 Nut – Tubing Fitting 66518 Tubing – Vent 230254 Fitting – Tubing 230256 Fitting – Air Cleaner Pipe		22740	Screen – Fuel Pump Filter
21376	Ring – Piston, Compression, Top – .010" O.S.	21926	Elbow – Carburetor Intake	22753	Cover – Governor Hole
21377	Ring – Piston, Compression, Top – .020" O.S.	21927	Spacer – Carburetor Elbow Used only on engines equipped with automatic choke.	22818	Dipper – Connecting Rod
21378	Ring – Piston, Compression, Top – .030" O.S.	†22032	Washer – Needle Valve Packing	22834	Washer – Spacer
21453	Lever – Hand Starter	22036	Valve – Throttle	22856	Lock – Connecting Rod Screw
21470	Body – Lower Carburetor	22050	Valve – Choke	22909	Cup – Governor
<b>Note:</b> 99720 Body Assembly – Lower Carburetor Used on type Nos. 105116, 105197, 105893, 106022, 106027. Includes: 90051 Screw – Machine, Rd. Hd. – 6-32 x $\frac{5}{16}$ " 90362 Washer – Lock – No. 6 x $\frac{3}{64}$ x $\frac{1}{32}$ " 291063 Body Assembly – Lower Carburetor Used on type Nos. 106523, 106526, 106529, 106531, 106534, 106536, 106539, 106548. Includes: 90051 Screw – Machine, Rd. Hd. – 6-32 x $\frac{5}{16}$ " 91122 Washer – Lock – Shakeproof No. 1206		<b>Note:</b> 22876 Valve – Choke Used on type Nos. 106523, 106526, 106529, 106531, 106534, 106536, 106539, 106548. 22062 Washer – Choke Lever 22182 Washer – Clutch Retainer 22216 Cover – Breather 22217 Shield – Oil Spray 22221 Cover – Valve <b>Note:</b> 220706 Cover – Valve Used on type Nos. 105186, 105187, 105206, 105208, 105209, 105901, 105903. Uses: 66638 Tube – Breather 220879 Cover – Valve Used on type No. 105213. Uses: 66578 Grommet 220754 Support – Breather Tube 230372 Tube – Breath Breather 293328 Cover – Valve Used on type Nos. 105104, 105106, 105145, 105159, 105163, 105180, 105185, 105193, 105200, 105204, 105205, 105212, 105885, 105898, 106030, 106034, 106035.		22984	Cover – Fuel Pump Hole
21589 Lever – Governor		22238 Washer – Cylinder Mounting		23068	Nut – Speed Adjusting
21611 Elbow – Air Cleaner		22243 Washer – Cylinder Mounting		23069	Screw – Speed Adjusting
<b>Note:</b> 210134 Elbow – Air Cleaner Used on type Nos. 105570, 105571. 210349 Elbow – Air Cleaner Used on type Nos. 105104, 105145, 105185, 106035. Uses: 66518 Tubing – Vent 230252 Fitting – Air Cleaner Pipe 210349 Elbow – Air Cleaner Used on type No. 106030. Uses: 23699 Nut – Tubing Fitting 66518 Tubing – Vent 230254 Fitting – Tubing 230256 Fitting – Air Cleaner Pipe		22279 Brace – Air Cleaner Elbow		†23114	Pin – Float Hinge
21646 Housing – Governor		*22353 Washer – Valve Cover		23184	Retainer – Valve Spring
21694 Head – Fuel Pump		22368 Washer – Control Lever		<b>Note:</b> 292259 Rotocap – Exhaust Valve Used on type Nos. 105074, 105075, 105079, 105083, 105086, 105116, 105123, 105167, 105197, 105566, 105570, 105571, 105572, 105574, 105577, 105598, 105603, 105606, 105618, 105622, 105623, 105629, 105850, 105851, 105899, 105901, 106535, 106536, 106537.	
*Included in Gasket Set – Part No. 291376.		22531 Lever – Governor Control		23187	Pin – Valve Spring Retainer
†Included in Carburetor Overhaul Kit – Part No. 291691.		22532 Stop – Governor Lever		<b>Note:</b> 230126 Pin – Exhaust Valve Rotocap Retainer 230127 Retainer – Exhaust Valve Rotocap Used on type Nos. 105074, 105075, 105079, 105083, 105086, 105116, 105123, 105167, 105197, 105566, 105570, 105571, 105572, 105574, 105577, 105598, 105603, 105606, 105618, 105622, 105623, 105629, 105850, 105851, 105899, 105901, 106535, 106536, 106537.	
		22547 Screen – Fuel Filter		†23222	Nozzle – Carburetor
				†23227	Nut – Needle Valve Packing
				23230	Bushing – Throttle Shaft
				23270	Screw – Choke Lever
				23292	Bolt – Air Cleaner – $6\frac{5}{16}$ " long
				<b>Note:</b> 23987 Bolt – Air Cleaner – $6\frac{15}{16}$ " long Used on type Nos. 105566, 105572.	
				23334	Stud – Air Cleaner – 6" long
				<b>Note:</b> 23711 Stud – Air Cleaner – $6\frac{15}{16}$ " long Used on type Nos. 105570, 105571, 105623.	
				23386	Valve – Intake
				<b>Note:</b> 23663 Valve Used as intake valve on type Nos. 105074, 105075, 105079, 105083, 105086, 105116, 105566, 105570, 105571, 105572, 105574, 105577, 105598, 105850, 105851, 106537.	



PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
23388	Pinion - Starter	26873	Crankshaft		Used on type Nos. 105510,
23443	Pin - Engine Base	<b>Note:</b> 26343	Crankshaft		105516, 105530, 105534, 105544,
23444	Stud - Valve Cover		Used on type Nos. 105523,		105545, 105547, 105548, 105550,
23663	Valve - Exhaust		105537, 105539, 105546, 105559,		105551, 105555, 105561, 105562,
<b>Note:</b> 26515	Valve - Exhaust		105563, 105572, 105574, 105576,		105564, 105567, 105568, 105569,
	Used on type Nos. 105074,		105594, 105600, 105601, 105603,		105573, 105577, 105583, 105584,
	105075, 105079, 105083, 105086,		105609, 105625, 105629.		105585, 105588, 105590, 105592,
	105116, 105167, 105197, 105566,	26362	Crankshaft		105593, 105595, 105596, 105598,
	105570, 105571, 105572, 105574,		Used on type Nos. 105522,		105602, 105604, 105608, 105610,
	105577, 105598, 105603, 105606,		105528, 105531, 105552, 105575,		105611, 105627, 106510, 106530,
	105618, 105622, 105623, 105850,		105580, 105581, 105614, 105624,		106548.
	105851, 105899, 105901, 106537.		106521, 106523, 106523, 106524,	26891	Crankshaft
23688	Bushing - Control		106525, 106526, 106527, 106528,		Used on type Nos. 105012,
23690	Shaft - Governor		106529, 106531, 106532, 106534,		105013, 105078, 105083, 105158,
23691	Bushing - Governor Crank		106535, 106536, 106537, 106538,		105202, 105203.
23699	Nut - Fuel Shut-off Valve		106539, 106541, 106543, 106544,	26892	Crankshaft
23722	Screw - Governor Control Lever		106546, 106549.		Used on type Nos. 105524,
23783	Pin - Fuel Pump Lever	26589	Crankshaft		105578, 105589.
23883	Shaft - Thermostat		Used on type No. 106547.	26894	Crankshaft
23884	Stop - Thermostat Shaft	26596	Crankshaft		Used on type Nos. 105558,
23885	Support - Thermostat Shaft		Used on type Nos. 105091,		105571, 105586, 105622.
	(Inner)		105211, 105536, 105810, 105821,	Uses: 23158	Sleeve
23886	Support - Thermostat Shaft		105822, 105823, 105824, 105825,	230292	Locknut
	(Outer)		105826, 105827, 105828, 105829,	62980	Washer
23933	Valve - Fuel Shut-off		105830, 105831, 105832, 105833,	26897	Crankshaft
26021	Spring - Intake Valve		105834, 105835, 105836, 105838,		Used on type Nos. 105034,
26025	Spring - Pedal Return		105839, 105844, 105845, 105846,		105086, 105116.
26026	Lock - Piston Pin		105847, 105848, 105849, 105850,	26916	Crankshaft
26032	Spring - Clutch Retainer		105851, 105852, 105853, 105854,		Used on type No. 105606.
26099	Wire - Control, 54" long		105855, 105856, 105857, 105859,	26951	Crankshaft
<b>Note:</b>	If longer wire is needed, specify		105860, 105862, 105863, 105864,		Used on type Nos. 105011,
	length by inches; if shorter wire		105865, 105866, 105867, 105868,		105017, 105058, 105059, 105070,
	is needed order No. 26099 and		105869, 105870, 105871, 105874,		105072, 105090, 105107, 105110,
	cut to required length.		105875, 105876, 105877, 105878,		105120, 105125, 105133, 105135,
26718	Wire - Control - 84"		105879, 105880, 105883, 105885,		105137, 105138, 105139, 105140,
	long (Stainless Steel)		105886, 105887, 105892, 105895,		105141, 105142, 105143, 105146,
	Used on type Nos. 106022,		105896, 105899, 105900, 105901,		105147, 105149, 105152, 105154,
	106024, 106027.		105903, 105998.		105156, 105161, 105165, 105169,
†26157	Spring - Throttle Adjustment	26632	Crankshaft		105170, 105172, 105173, 105174,
26228	Spring - Choke Lever Return		Used on type No. 105529.		105176, 105177, 105183, 105184,
26229	Spring - Choke Lever	26655	Crankshaft		105190, 105191, 105194, 105199,
26267	Spring - Control Wire Return		Used on type No. 105197.		105200, 105201, 105207, 105209,
26330	Spring - Breather Retainer	Uses: 23739	Spacer		105212, 105213, 106011, 106017,
26391	Link - Throttle	26690	Crankshaft		106033.
26393	Spring - Governor		Used on type Nos. 105084,	26953	Crankshaft
26478	Spring - Exhaust Valve		105126, 105144, 105168, 105811,		Used on type No. 105554.
<b>Note:</b> 26826	Spring - Exhaust Valve		105812, 105840, 105841, 105842,	26967	Crankshaft
	Used on type Nos. 105074,		105843, 105858, 105861, 105872,		Used on type Nos. 105511,
	105075, 105079, 105083, 105086,		105873, 105881, 105882, 105884,		105517, 105591, 105599, 105605,
	105116, 105123, 105167, 105197,		105888, 105889, 105890, 105891,		105617, 105619, 105628, 105630,
	105566, 105570, 105571, 105572,		105893, 105894, 105897, 105898,		106511, 106517.
	105574, 105577, 105598, 105603,		105902.	26968	Crankshaft
	105606, 105618, 105622, 105623,	26767	Crankshaft		Used on type Nos. 105113,
	105629, 105850, 105851, 105899,		Used on type Nos. 105092,		105155.
	105901, 106535, 106536, 106537.		105549.	26981	Crankshaft
26502	Spring - Governor	26886	Crankshaft		Used on type Nos. 105119,
26548	Link - Governor		Used on type Nos. 105521,		105194.
26578	Spring - Control Rod Return		105525, 105526, 105535, 105540,	26985	Crankshaft
26587	Spring - Fuel Pump Lever		105541, 105542, 105543, 105553,		Used on type Nos. 105582,
26588	Spring - Fuel Pump Diaphragm		105556, 105557, 105565, 105566,		105597.
26594	Thermostat		105570, 105607, 105612, 105613,	260021	Crankshaft
26851	Link - Choke		105615, 105616, 105618, 105620,		Used on type No. 105538.
			105621, 105623.	26888	Rod - Control
* Included in Gasket Set - Part No. 291376.		26890	Crankshaft	*27043	Gasket - Engine Base
† Included in Carburetor Overhaul Kit - Part No. 291691.					

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
27108	Washer - Starter Lever	105603, 105606, 105610, 105612, 105618, 105622, 105623, 105850, 105851, 105899, 105901.		<b>Note:</b> 293412	Plug Assembly - Oil Filler and Drain Used on type No. 105901.
27139	Gasket - Gear Case Mounting			66986	Casing - Control Wire - 48" long
27140	Gasket - Governor Housing	29878	Rope - Starter	<b>Note:</b>	If a longer casing is needed, specify length in inches; if a shorter casing is needed order No 66986 and cut to required length.
27145	Packing - Shut-off Valve	38852	Washer - Armature and Breaker Mounting	*67307	Gasket - Magneto Plate - .015" thick
27313	Gasket - Gear Case Cover	61703	Gear - Cam	*67527	Gasket - Valve Cover
27314	Gasket - Fuel Pump Mounting	61756	Ring - Piston, Compression, Center - Standard	*67597	Gasket - Magneto Plate - .005" thick
27323	Gasket - Breather Body	61757	Ring - Piston, Oil - Standard	*67607	Gasket - Magneto Plate - .009" thick
*27355	Gasket - Intake Elbow Mounting	61760	Key - Flywheel	68122	Plug - Cam Shaft
<b>Note:</b> 27384	Gasket - Intake Elbow Mounting Used on type Nos. 106523, 106526, 106529, 106531, 106534, 106536, 106539, 106548.	61768	Ring - Piston, Compression, Center - .010" O.S.	68477	Gasket - Fuel Filter Bowl
*27423	Gasket - Air Cleaner Mounting	61769	Ring - Piston, Compression, Center - .020" O.S.	68487	Bowl - Fuel Filter
<b>Note:</b> 68957	Gasket - Air Cleaner Used on type Nos. 105566, 105570, 105571, 105572.	61770	Ring - Piston, Compression, Center - .030" O.S.	†68857	Gasket - Carburetor Body
292252	Gasket Set Used on engines with plastic bowl air cleaner.	61771	Ring - Piston, Oil - .010" O.S.	68877	Gasket - Fuel Inlet Valve Seat
27590	Filter - Carburetor Drain	61772	Ring - Piston, Oil - .020" O.S.	†68887	Packing - Carburetor Needle Valve (Also used on tank valve before Serial No. 500891.
27660	Gasket - Air Cleaner	61773	Ring - Piston, Oil - .030" O.S.	†68897	Gasket - Carburetor Venturi
<b>Note:</b> 27666	Gasket - Air Cleaner Used on type No. 105213.	61967	Stop - Throttle Lever	†*68987	Gasket - Carburetor Mounting
27795	Gasket - Air Cleaner	62199	Washer - Tank Bracket	<b>Note:</b> 27310	Gasket - Carburetor Mounting Used on type Nos. 106523, 106526, 106529, 106531, 106534, 106536, 106548.
29667	Breaker Assembly - Ignition	62536	Cup - Starter Return Spring	69221	Cap - Fuel Tank
<b>Note:</b> 292648	Breaker Assembly - Ignition Used on type Nos. 105074, 105075, 105083, 105086, 105112, 105116, 105117, 105164, 105167, 105197, 105566, 105570, 105571, 105572, 105574, 105577, 105598, 105603, 105606, 105610, 105612, 105618, 105622, 105623, 105850, 105851, 105899, 105901.	62538	Washer - Clutch Retainer	<b>Note:</b> 69961	Cap - Fuel Tank Used on type Nos. 105130, 105622, 106022.
29693	Plug - Spark (with gasket)	62552	Bushing - Cylinder	89988	Cap - Fuel Tank Used on type Nos. 105566, 105570, 105571, 105572, 105623.
<b>Note:</b> 292519	Plug - Spark - with Gasket Used on type Nos. 105074, 105075, 105083, 105086, 105112, 105116, 105117, 105164, 105167, 105197, 105566, 105570, 105571, 105572, 105574, 105577, 105598, 105603, 105606, 105610, 105612, 105618, 105622, 105623, 105850, 105851, 105899, 105901.	62577	Washer - Flywheel	293026	Cap - Fuel Tank Used on type No. 105901.
293923	Plug - Spark Used on type Nos. 105162, 105627, 106538, 106539.	62835	Cover - Dust	89127	Clutch and Pulley Assembly - Starter
29806	Gasket - Spark Plug	62899	Washer - Thermostat	<b>Note:</b> 290221	Clutch Assembly - Starter Used on type Nos. 105086, 105116, 105197.
29835	Flywheel - Magneto	63217	Nut - Needle Valve Packing (Used before Serial No. 500891)	89283	Piston Assembly - .010" O.S.
<b>Note:</b> 292471	Flywheel - Magneto Used on type Nos. 105116, 105197.	63426	Locknut - Control Wire Casing	89285	Piston Assembly - .020" O.S.
29861	Condenser	63532	Spacer - Flame Arrester	89287	Piston Assembly - .030" O.S.
<b>Note:</b> 290593	Condenser Used on type Nos. 105074, 105075, 105083, 105086, 105112, 105116, 105117, 105164, 105167, 105197, 105566, 105570, 105571, 105572, 105574, 105577, 105598, 105603, 105606, 105610, 105612, 105618, 105622, 105623, 105850, 105851, 105899, 105891.	63770	Ball - Clutch	89289	Piston Assembly - Standard
* Included in Gasket Set - Part No. 291376.		63771	Bushing - Starter Sector	89346	Filter Assembly - Fuel
† Included in Carburetor Overhaul Kit - Part No. 291691.		63785	Shaft - Cam	89347	Cover Assembly - Fuel Filter
		63788	Tappet - Valve	<b>Note:</b> 21145	Cover - Fuel Filter Used on type No. 105901.
		63821	Wrench - Socket Set Screw	89363	Sector Assembly - Starter
		65294	Gasket - Filler Screw	89365	Starter Assembly - Foot
		65704	Plunger - Breaker Point	<b>Note:</b> 291230	Starter Assembly - Foot Used on type Nos. 105116, 105197.
		65968	Disk - Breather	89495	Body Assembly - Upper Carburetor
		66111	Connector - Fuel Pipe	<b>Note:</b> 293732	Body Assembly -
		*66114	Washer - Cylinder Mounting		
		66204	Gasket - Fuel Pump Valve		
		66384	Rope - Starter (47 1/8" long)		
		<b>Note:</b> 66444	Rope - Starter (55 1/8" long) Used on type No. 105147,		
		66432	Washer - Control Wire Casing Retainer and Governor Control Lever.		
		66438	Insulator - Stop Switch		
		<b>Note:</b> 66498	Insulator - Stop Switch Used on type Nos. 105074, 105075, 105083, 105086, 105112, 105116, 105117, 105164, 105167, 105197, 105566, 105570, 105571, 105572, 105574, 105577, 105598, 105603, 105606, 105610, 105612, 105618, 105622, 105623, 105850, 105851, 105899, 105891.		
		66528	Bumper - Starter Pulley		
		66718	Washer - Starter Clutch Thrust		
		66728	Grip - Starter Rope		
		66768	Plug - Oil Filler		

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
	Upper Carburetor Used on type Nos. 105104, 105145, 105185, 106035.		105086, 105112, 105116, 105117, 105164, 105167, 105197, 105566, 105570, 105571, 105572, 105574, 105577, 105598, 105603, 105606, 105610, 105612, 105618, 105622, 105623, 105850, 105851, 105899, 105901.		Used on type Nos. 105116, 105197.
89600	Starter Assembly - Hand			91741	Screw - Pedal Return Spring Cup
89611	Sector Assembly - Starter			91758	Screw - Set, Socket Head - $\frac{5}{16}$ -24 x $\frac{1}{2}$ "
89660	Seal - Oil			91810	Elbow - Exhaust (45° Street)
89677	Bushing - Cylinder or Magneto Includes: 89660 Seal - Oil	90847	Nut - Hex. - $\frac{1}{4}$ -28	Note: 91812	Elbow - Exhaust (90° Street)
89742	Shield - Spark Plug	91059	Washer - Lock - No. 12 x $\frac{1}{16}$ x $\frac{1}{16}$ "		Used on type Nos. 105087, 105097, 105136, 105151, 105172, 105173, 105554, 105611, 105826, 105843, 105848, 105854, 105859, 105863, 105878, 105879, 105891, 105893, 105897, 105998.
Note: 291630	Shield - Spark Plug (with stop switch)	91084	Plug - Pipe - $\frac{3}{8}$ "	91811	Locknut - Exhaust Elbow
	Used on type Nos. 105078, 105184, 105557, 105865, 105872, 105888, 106524.	Note: 92737	Plug - Oil Drain - $\frac{1}{4}$ " Magnetic	91920	Screw - Machine, Fill. Hd. - 8-32 x $\frac{5}{16}$ "
89838	Wrench - Spark Plug		Used on type No. 105850.	92015	Plug - Oil Drain (Gear Cover)
89966	Muffler	92814	Plug - Oil Drain - $\frac{3}{8}$ " Headless, Slotted	Note: 92961	Elbow - Street, $\frac{1}{8}$ ", 90°
Note: 89945	Muffler		Used on type Nos. 105061, 105104, 105145, 105185, 106035.		Used on type Nos. 105836, 105877.
	Used on type Nos. 105823, 105851, 105891, 105893, 105897, 105899, 106537.	93003	Plug - Oil Drain	92017	Screw - Machine, Fill. Hd. - 8-32 x $\frac{5}{16}$ "
290910	Muffler		Used on type No. 105901.	92067	Nut - Wing
	Used on type Nos. 106022, 106027.	91208	Nut - Hex. - $\frac{5}{16}$ -24	92129	Nut - Hex. - $\frac{1}{4}$ -28
292054	Muffler	91237	Washer - Lock - $\frac{1}{4}$ x $\frac{3}{32}$ x $\frac{3}{64}$ "	92227	Washer - Lock - Shakeproof No. 1320
	Used on type Nos. 105023, 105024, 105029, 105033, 105043, 105053, 105054, 105055, 105057, 105062, 105063, 105068, 105071, 105073, 105095, 105101, 105103, 105105, 105106, 105109, 105110, 105115, 105118, 105133, 105135, 105136, 105137, 105139, 105148, 105149, 105157, 105172, 105173, 105174, 105175, 105176, 105179, 105187, 105196, 105205, 105208, 105209, 105544, 105551, 105593, 105610, 105844, 105847, 105868.	91419	Screw - Cap, Hex. Hd. - $\frac{1}{4}$ -20 x $\frac{5}{8}$ "	92287	Screw - Machine, Rd. Hd. - 10-32 x $\frac{1}{4}$ "
293449	Muffler	Note: 91439	Screw - Cap, Hex. Hd. - $\frac{1}{4}$ -20 x $\frac{3}{8}$ "	92290	Washer - Lock - No. 10 x $\frac{1}{16}$ x $\frac{3}{64}$ "
	Used on type No. 105901.		Used in upper blower housing mounting hole on type Nos. 105029, 105041, 105046, 105059, 105061, 105067, 105068, 105069, 105073, 105084, 105085, 105086, 105088, 105099, 105104, 105110, 105113, 105116, 105118, 105122, 105129, 105130, 105135, 105136, 105137, 105142, 105143, 105145, 105155, 105168, 105170, 105172, 105173, 105174, 105183, 105184, 105185, 105188, 105197, 105211, 105554, 105564, 105568, 105572, 105591, 105619, 105622, 105836, 105854, 105855, 105859, 105860, 105877, 105878, 105895, 106022, 106030, 106035, 106547.	92292	Nut - Hex. - $\frac{3}{8}$ -24
294441	Muffler	91439	Screw - Cap, Hex. Hd. - $\frac{1}{4}$ -20 x $\frac{3}{8}$ "	92306	Screw - Cap, Hex. Hd. - $\frac{1}{4}$ -28 x $\frac{5}{8}$ "
	Used on type Nos. 105198, 105199, 105531, 105624, 105628, 105903.	91488	Plug - Pipe, $\frac{1}{8}$ " Std., Sq. Hd.	92317	Washer - Lock - Shakeproof No. 1208
90050	Screw - Machine, Rd. Hd. - 6-32 x $\frac{1}{4}$ "	Note: 91249	Plug - Pipe, $\frac{1}{4}$ " Std., Sq. Hd.	92413	Pin - Cotter - $\frac{1}{16}$ x $\frac{3}{8}$ " long
90200	Screw - Machine, Fill. Hd. - 8-32 x $\frac{1}{2}$ "		Used on type Nos. 105121, 105140, 105153, 105171, 105604, 105605, 105887.	92427	Connector - Fuel Pipe
90202	Screw - Machine, Fill. Hd. - 10-32 x $\frac{1}{2}$ "	91539	Key - $\frac{1}{16}$ " Square	Note: 93010	Connector - Fuel Pipe (Used between filter and fuel pipe)
90310	Nut - Hex. - 6-32	91541	Screw - Cap, Hex. Hd. - $\frac{5}{16}$ -24 x $\frac{7}{8}$ "	91635	Connector - Filter (Used between filter and carburetor)
90355	Nut - Hex. - 10-32	91625	Connector - Fuel Filter (Used only on type Nos. 105121, 105140, 105153, 105171, 105604, 105605, 105887).		Used on type No. 105901.
90362	Washer - Lock - No. 6 x $\frac{3}{64}$ x $\frac{1}{32}$ "	Note: 230272	Connector - Fuel Filter	230318	Connector - Fuel Pipe
90366	Washer - Lock - $\frac{5}{16}$ x $\frac{1}{8}$ x $\frac{1}{16}$ "		Used on type No. 106030.		Used on type Nos. 105106, 105180, 105189, 105204.
90367	Washer - Lock - No. 8 x $\frac{5}{64}$ x $\frac{1}{32}$ "	91648	Screw - Cap, Hex. Hd. - $\frac{5}{16}$ -24 x $\frac{1}{2}$ "	92506	Screw - Machine, Rd. Hd. - 6-32 x 1"
90576	Nut - Hex. - 8-32	91708	Nut - Flywheel	92604	Screw - Connecting Rod - 1" long
90686	Screw - Cap, Hex. Hd. - $\frac{3}{8}$ -24 x 1"	Note: 92514	Nut - Flywheel	92605	Screw - Oil Filler
90832	Washer - Lock - $\frac{1}{4}$ x $\frac{1}{32}$ x $\frac{5}{64}$ "			92617	Plug - Breather
Note: 92778	Washer - Lock - Shakeproof			92644	Rivet - Tubular - $\frac{1}{8}$ x $\frac{13}{64}$ "
	Used to mount blower housing; also tank to support on type Nos. 105074, 105075, 105083,			92663	Screw - Starter Mounting

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
92702	Screw – Condenser Mounting Sem	106526, 106529, 106531, 106534, 106536, 106539, 106548.		292930	Carburetor Assembly Used on type Nos. 106523, 106526, 106529, 106531, 106534, 106536, 106539, 106548.
92703	Screw – Dust Cover Mounting Sem	99082	Pedal – Foot Starter	293550	Carburetor Assembly Used on type Nos. 105104, 105145, 105185, 106035.
92706	Washer – Lock – Shakeproof	Note: 99103	Pedal – Foot Starter Used on type Nos. 105116, 105197.	293780	Carburetor Assembly Used on type Nos. 105554, 106547.
92708	Screw – Armature Mounting Sem	99158	Bearing – Ball – Used on 6-FB, 6-FBC, and 6-FBP Engines only	210028	Body – Breather
92710	Screw – Cylinder Mounting – 1½" long (Washer Head)	Note: 62552	Bushing – Cylinder Used on type Nos. 105536, 105549.	210068	Head – Cylinder
92715	Screw – Governor Housing Mounting and Control Lever Sem	99176	Seal – Oil – Used on 6-FB, 6-FBC, and 6-FBP Engines only	Note: 210345	Head – Cylinder Used on type Nos. 105050, 105094, 105127, 105553, 105555, 105559, 105563, 105576, 105580, 105589, 105609, 105835, 105862, 106532, 106545, 106549.
92716	Screw – Cylinder Mounting (Washer Head)	Note: 99440	Seal – Oil Used on type Nos. 105558, 105571, 105586, 105622.	293545	Head – Cylinder Used on type No. 105901.
92734	Screw – Cap, Hex. Hd. – ¼-20 x ½"	99395	Arrester – Flame	210400	Housing – Starter Clutch
92747	Screw – Gear Case Mounting Sem	99632	Tooth Assembly – Spring	220093	Retainer – Spring
92791	Washer – Lock – Shakeproof	99634	Body – Upper Carburetor	220137	Screen – Blower Housing (Used on engines with Bolt-On Recoil Starter)
92909	Screw – Cylinder Head (1⅞" long)	99665	Yoke – Fuel Filter	220167	Housing – Blower
Note: 91386	Screw – Cylinder Head (2" long) Used to mount bracket and cylinder head on type Nos. 105068, 105073, 105122, 105135, 105137, 105143.	99679	Lever Assembly – Choke	Note: 220184	Housing – Blower (For engines with Bolt-On Recoil Starter) Used on type Nos. 105011, 105058, 105059, 105070, 105072, 105084, 105090, 105107, 105110, 105113, 105119, 105120, 105125, 105126, 105135, 105147, 105511, 105582, 105591, 105811, 105840, 105841, 105842, 105843, 105858, 105861, 105872, 105873, 106011, 106511.
91442	Screw – Cylinder Head (2¼" long) Used to mount bracket and cylinder head on type Nos. 105041, 105059, 105142.	Note: 291040	Lever and Weight Assembly – Automatic Choke Used on type Nos. 106523, 106526, 106529, 106531, 106534, 106536, 106539, 106548.	292838	Housing – Blower (with stop switch) Used on type Nos. 105074, 105075, 105083, 105086, 105112, 105116, 105117, 105164, 105167, 105197, 105210, 105526, 105528, 105531, 105552, 105565, 105566, 105570, 105571, 105572, 105574, 105575, 105577, 105583, 105598, 105603, 105606, 105610, 105612, 105614, 105615, 105618, 105622, 105623, 105624, 105850, 105851, 105899, 105901, 106521, 106522, 106523, 106525, 106526, 106527, 106528, 106529, 106530, 106531, 106532, 106534, 106535, 106537, 106541, 106543, 106546, 106549.
91442	Screw – Cylinder Head (2" long)	99700	Shaft and Lever – Choke	220169	Cover – Cylinder Head
68873	Spacer Used to mount bracket and cylinder head on type No. 105095.	Note: 23252	Shaft – Choke Used on type Nos. 105116, 105197, 105893, 106022, 106027.	Note: 220171	Cover – Cylinder Head Used on type Nos. 105084, 105086, 105113, 105116, 105130, 105155, 105168, 105170, 105197, 105211, 105554, 105564, 105568, 105572, 105591, 105619, 105854, 105855, 105859, 105895, 106022, 106027, 106547.
92907	Screw – Cylinder Head (2¾" long) Used to mount bracket and cylinder head on type No. 105029.	292928	Shaft, Lever and Vane Assembly – Automatic Choke Used on type Nos. 106523, 106526, 106529, 106531, 106534, 106536, 106539, 106548.		
92985	Screw – Cylinder Head (3" long)	99868	Shaft and Lever Assembly – Throttle		
63336	Spacer Used on type Nos. 105039, 105121, 105140, 105153.	Note: 293549	Lever Assembly – Throttle Used on type Nos. 105104, 105145, 105185, 106035.		
92952	Screw – Machine, Rd. Hd. – 8-32 x 1¼"	99874	Adjuster Speed		
92955	Screw – Throttle Housing, Fuel Pump Hd. and Choke Lever Mfg. Sem	Note: 89617	Adjuster – Speed Used on type Nos. 105074, 105075, 105083, 105086, 105112, 105116, 105117, 105164, 105167, 105197, 105566, 105570, 105571, 105572, 105574, 105577, 105598, 105603, 105606, 105610, 105612, 105618, 105622, 105623, 105850, 105851, 105899, 105901.		
93038	Screw – Choke and Throttle Valve Mounting Sem Screw	99876	Carburetor Assembly		
93042	Screw – Rotating Screen and Breaker Mounting Sem	Note: 89507	Carburetor Assembly Used on type Nos. 105116, 105197, 105893.		
93043	Pin – Governor Lever and Throttle Stop	291059	Carburetor Assembly Used on type Nos. 106022, 106027.		
93083	Screw – Tank Bracket Mounting Sem	292116	Carburetor Assembly Used on type Nos. 105050, 105094, 105127, 105553, 105555, 105559, 105563, 105576, 105580, 105589, 105835, 105862, 106532, 106545, 106549.		
93128	Screw – Carburetor and Intake Elbow Mounting Sem				
Note: 92684	Screw – Machine, Fill. Hd. – ¼-20 x 1⅞" Used on type Nos. 106523,				

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
	<b>220171</b> Cover – Cylinder Head		on type No. 105836:		105172, 105173, 105188:
	<b>220173</b> Support – Upper Fuel Tank		<b>220441</b> Bracket – Fuel Tank		<b>220522</b> Bracket – Fuel Tank
	Used on type Nos. 105036, 105037, 105038, 105042, 105083, 105574, 105588, 105598, 105603, 105889, 105900, 105901.		<b>220444</b> Baffle		<b>90366</b> Washer – Lock – $\frac{5}{16} \times \frac{1}{8} \times \frac{1}{16}$ "
	<b>220171</b> Cover – Cylinder Head		<b>90832</b> Washer – Lock – $\frac{1}{4} \times \frac{3}{32} \times \frac{5}{64}$ "		<b>90832</b> Washer – Lock – $\frac{1}{4} \times \frac{3}{32} \times \frac{5}{64}$ "
	<b>220439</b> Support – Upper Fuel Tank		<b>92666</b> Screw – Cap, Hex. Hd. $\frac{1}{4}$ -20 x $\frac{1}{2}$ "		<b>92666</b> Screw – Cap, Hex. Hd. $\frac{1}{4}$ -20 x $\frac{1}{2}$ "
	Used on type Nos. 105041, 105046, 105059, 105061, 105067, 105068, 105069, 105073, 105085, 105088, 105104, 105110, 105118, 105122, 105129, 105135, 105137, 105142, 105143, 105145, 105174, 105183, 105185, 105836, 105877, 106030, 106035.		The following parts used in conjunction with No. 220195 Bracket on type No. 105067:		The following parts used in place of No. 220195 Bracket on type No. 105866:
	<b>220171</b> Cover – Cylinder Head		<b>220442</b> Bracket – Fuel Tank		<b>220524</b> Bracket – Fuel Tank
	<b>220455</b> Support – Upper Fuel Tank		<b>220445</b> Baffle		<b>90832</b> Washer – Lock – $\frac{1}{4} \times \frac{3}{32} \times \frac{5}{64}$ "
	Used on type Nos. 105103, 105109, 105120, 105128, 105141, 105193, 105586, 105590, 105593, 105595, 105860, 106024.		<b>90366</b> Washer – Lock – $\frac{5}{16} \times \frac{1}{8} \times \frac{1}{16}$ "		<b>92666</b> Screw – Cap, Hex. Hd. $\frac{1}{4}$ -20 x $\frac{1}{2}$ "
	<b>220171</b> Cover – Cylinder Head		<b>90832</b> Washer – Lock – $\frac{1}{4} \times \frac{3}{32} \times \frac{5}{64}$ "		The following parts used in conjunction with No. 220195 Bracket on type No. 105877:
	<b>220456</b> Support – Upper Fuel Tank		<b>92666</b> Screw – Cap, Hex. Hd. $\frac{1}{4}$ -20 x $\frac{1}{2}$ "		<b>220627</b> Bracket – Fuel Tank
	Used on type Nos. 105099, 105136, 105172, 105173, 105188, 105826, 105866, 105878.		<b>90950</b> Screw – Cap, Hex. Hd. $\frac{5}{16}$ -24 x $\frac{3}{4}$ "		<b>220444</b> Baffle
	<b>220280</b> Cover – Cylinder Head		The following parts used in conjunction with No. 220195 Bracket on type Nos. 105041, 105046, 105059, 105061, 105068, 105069, 105088, 105104, 105110, 105118, 105129, 105135, 105137, 105142, 105143, 105145, 105174, 105183, 105184, 105185, 106030, 106035.		<b>90832</b> Washer – Lock – $\frac{1}{4} \times \frac{3}{32} \times \frac{5}{64}$ "
	<b>220173</b> Support – Upper Fuel Tank		<b>220443</b> Bracket – Fuel Tank	<b>220197</b> Switch – Stop	
	Used on type Nos. 105552, 105583, 105614, 106521, 106522, 106523, 106524, 106528, 106537, 106543.		<b>220444</b> Baffle	<b>220230</b> Guide – Magneto Air (Used only on engines with a mechanical Governor)	
	<b>220280</b> Cover – Cylinder Head		<b>90366</b> Washer – Lock – $\frac{5}{16} \times \frac{1}{8} \times \frac{1}{16}$ "	<b>220234</b> Lock – Gear Case Mounting Screw	
	<b>220439</b> Support – Upper Fuel Tank		<b>90832</b> Washer – Lock – $\frac{1}{4} \times \frac{3}{32} \times \frac{5}{64}$ "	<b>220292</b> Brace – Air Cleaner Elbow	
	Used on type No. 105184.		<b>92666</b> Screw – Cap, Hex. Hd. $\frac{1}{4}$ -20 x $\frac{1}{2}$ "	<b>220352</b> Plug – Welch	
	<b>220280</b> Cover – Cylinder Head		<b>90950</b> Screw – Cap, Hex. Hd. $\frac{5}{16}$ -24 x $\frac{3}{4}$ "	<b>220397</b> Brace – Carburetor	
	<b>220455</b> Support – Upper Fuel Tank		The following parts used in conjunction with No. 220195 Bracket on type Nos. 105073, 105122:	<b>220417</b> Strap – Governor Control Rod	
	Used on type Nos. 106531, 106534, 106546, 106549.		<b>220443</b> Bracket – Fuel Tank	<b>Note:</b> <b>220530</b> Strap – Control Wire Casing	
	<b>220281</b> Cover – Cylinder Head		<b>220444</b> Baffle	Used on type Nos. 105104, 105145, 105185, 106035.	
	Used on type Nos. 105078, 105169, 105210, 105526, 105528, 105531, 105557, 105565, 105575, 105615, 105617, 105624, 105865, 105872, 105888, 106031, 106525, 106526, 106527, 106529, 106530, 106532, 106535, 106536, 106541, 106548.		<b>90832</b> Washer – Lock – $\frac{1}{4} \times \frac{3}{32} \times \frac{5}{64}$ "	<b>220521</b> Retainer – Carburetor Drain Filter	
			<b>92666</b> Screw – Cap, Hex. Hd. $\frac{1}{4}$ -20 x $\frac{1}{2}$ "	<b>220547</b> Pulley – Rope Starter	
			<b>91325</b> Washer – Flat	<b>Note:</b> <b>29743</b> Pulley – Drive	
			<b>92279</b> Screw – Cap, Hex Hd. $\frac{5}{16}$ -24 x $1\frac{1}{2}$ "	Used on type No. 105158.	
			<b>92983</b> Washer – Spring	<b>220575</b> Washer – Clutch Retainer	
			<b>230230</b> Spacer	<b>220576</b> Screen – Recoil Starter	
			The following parts used in place of No. 220195 Bracket on type Nos. 105826, 105878:	<b>220859</b> Locknut – Muffler and Exhaust Elbow	
			<b>220458</b> Bracket – Fuel Tank	<b>220865</b> Washer – Spring	
			<b>90832</b> Washer – Lock – $\frac{1}{4} \times \frac{3}{32} \times \frac{5}{64}$ "	<b>230005</b> Valve – Needle	
			<b>92666</b> Screw – Cap, Hex. Hd. $\frac{1}{4}$ -20 x $\frac{1}{2}$ "	<b>Note:</b> <b>292088</b> Valve – Needle	
			The following parts used in place of No. 220195 Bracket on type Nos. 105099, 105136,	Used on type Nos. 105050, 105094, 105127, 105553, 105555, 105559, 105563, 105576, 105580, 105589, 105609, 105835, 105862, 106532, 106545, 106549.	
<b>220172</b> Shield – Cylinder				<b>230010</b> Wrench – Socket Screw	
<b>220195</b> Bracket – Fuel Tank				<b>230187</b> Valve – Fuel Shut-Off (Use Part No. 293934)	
<b>Note:</b> <b>220498</b> Bracket – Fuel Tank				<b>230228</b> Pin – Starter Grip	
Used on type Nos. 105103, 105109, 105120, 105141, 105193, 105586, 105593, 105595, 106534, 106546, 106549.				<b>230238</b> Stud – Air Cleaner	
The following parts used in conjunction with No. 220195 Bracket				<b>Note:</b> <b>230361</b> Stud – Air Cleaner	
				Used on type No. 105213.	



PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION		
290017	Crank – Governor		6R-6 engines see part No. 290257).	290963	Rod Assembly – Connecting		
290062	Control – Throttle		89465 Cylinder Assembly	290980	Pin Assembly – Piston – Standard		
Note:	290463 Control – Throttle		Used on type Nos. 105024, 105041, 105046, 105047, 105055, 105059, 105061, 105067, 105068, 105069, 105073, 105085, 105088, 105090, 105099, 105104, 105110, 105118, 105122, 105124, 105129, 105132, 105135, 105136, 105137, 105142, 105143, 105145, 105152, 105163, 105172, 105173, 105174, 105179, 105180, 105183, 105184, 105185, 105188, 105191, 106030, 106035.	290981	Pin Assembly – Piston – .005" O. S.		
290166	Gear – Governor		290500 Cylinder Assembly	291015	Housing and Pulley Assembly – Starter Clutch		
290216	Control – Choke		Used on type Nos. 105074, 105075, 105079, 105083, 105086, 105116, 105167, 105197.	Note:	291017 Housing – Clutch		
290239	Cylinder Assembly		290779 Case Assembly – Gear	Used on type Nos. 105086, 105116, 105197.			
Note:	This group of cylinders including part No. 290239 used on 6-FB, 6FBC and 6FBP engines only.		Note:	291044	Lever Assembly – Thermostat		
89913	Cylinder Assembly		290802 Shaft Assembly – Drive	*291301	Gasket – Cylinder Head (1/16" thick)		
Used on type Nos. 105558, 105586.			Note:	291376	Gasket Set		
Includes:	91648 Screw – Cap, Hex. Hd. – 5/16"-24 x 1/2"		291764 Shaft Assembly – Drive	291391	Housing – Starter (Used only with bolt-on type recoil starter)		
	91865 Washer – Lock		Used on type No. 105998.	291495	Clutch Assembly – Starter (Used only with bolt-on type recoil starter)		
	For retaining ball bearing.		293272 Shaft Assembly – Drive	291617	Armature – Magneto		
290257	Cylinder Assembly		Used on type No. 105863.	Note:	292184 Armature – Magneto		
Used on type Nos. 105536, 105549.			293582 Shaft Assembly – Drive	Used on type Nos. 105074, 105075, 105083, 105086, 105096, 105112, 105116, 105117, 105164, 105167, 105197, 105566, 105570, 105571, 105572, 105574, 105577, 105598, 105603, 105606, 105610, 105612, 105618, 105622, 105623, 105850, 105851, 105899, 105901.			
290498	Cylinder Assembly		Used on type Nos. 105872, 105888.	291691	Carburetor Overhaul Kit		
Used on type No. 106537.			Order – Shaft Assembly – Drive.	291730	Cover Assembly – Gear Case		
290501	Cylinder Assembly		Used on type Nos. 105823, 105899 – from the equipment manufacturer.	291838	Cleaner Assembly – Air		
Used on type Nos. 105566, 105570, 105572, 105574, 105577, 105598, 105603, 105606, 105618, 105623.			290938	Note:	89980 Cleaner Assembly – Air		
291037	Cylinder Assembly		Base Assembly – Engine	Used on type Nos. 105566, 105570, 105571, 105572, 105623.			
Used on type Nos. 105554, 106547.			Note:	291849	Starter Assembly – Recoil (Bolt-On Type)		
292256	Cylinder Assembly		290946	Note:	293079 Starter Assembly – Recoil (Bolt-On Type)		
Used on type Nos. 105571, 105622.			Used on type Nos. 105022, 105024, 105028, 105032, 105041, 105044, 105047, 105048, 105054, 105055, 105057, 105059, 105060, 105061, 105062, 105071, 105073, 105076, 105080, 105087, 105090, 105095, 105097, 105098, 105099, 105106, 105108, 105113, 105118, 105122, 105124, 105132, 105142, 105143, 105150, 105152, 105155, 105157, 105163, 105170, 105177, 105179, 105180, 105183, 105187, 105196, 105200, 105203, 105204, 105554, 105562, 105585, 105606, 105611, 105826, 105831, 105834, 105839, 105840, 105841, 105843, 105848, 105854, 105855, 105859, 105863, 105867, 105869, 105872, 105878, 105881, 105883, 105888, 105889, 105893, 105894, 105897, 105903, 106021, 106032.		Used on type No. 105147.		
Includes:	91648 Screw – Cap, Hex. Hd. – 5/16"-24 x 1/2"		292290	291905	Breather Assembly		
	91865 Washer – Lock		Base Assembly – Engine	292037	Cover and Filter – Air Cleaner		
290257	Cylinder Assembly		Used on type No. 105850.	292038	Bowl – Air Cleaner		
Note:	These cylinders used on 6F and 6R-6 engines only.			292046	Spring – Starter		
290504	Cylinder Assembly			292149	Cable – Ignition		
Used on type Nos. 105850, 105851, 105899, 105901.				Note:	292915	Cable – Ignition	
290290	Ring Set – Standard Piston			Used on type Nos. 105169, 105210, 105526, 105528, 105531, 105552, 105565, 105575, 105583, 105614, 105615, 105617, 105624, 106031, 106033, 106521, 106522, 106523, 106524, 106525, 106526, 106527, 106528, 106529, 106530, 106531, 106532, 106534, 106535, 106536, 106537, 106541, 106543, 106546, 106548, 106549.			
290291	Ring Set – .010" O. S. Piston			292946	Cable – Ignition		
290292	Ring Set – .030" O. S. Piston			Used on type Nos. 105078,			
290465	Pump Assembly – Fuel						
290568	Lever Assembly – Control						
290584	Base – Control Lever						
290596	Ring Set – .020" O. S. Piston						
290622	Diaphragm – Fuel Pump						
290623	Valve – Fuel Pump						
290642	Lever – Control						
290738	Cylinder Assembly						
Note:	This group of cylinders including part No. 290738 used on Model "6" engines only. (For Model 6-FB engines see part No. 290239; for Model 6F and						
				* Included in Gasket Set – Part No. 291376.			

\* Included in Gasket Set – Part No. 291376.



PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
	105184, 105557, 105865, 105872, 105888. <b>293141</b> Cable – Ignition Used on type Nos. 105083, 105086, 105112, 105116, 105117, 105164, 105167, 105197, 105598, 105899, 105603, 105606, 105610, 105612, 105618, 105622, 105623, 105901. <b>293154</b> Cable – Ignition Used on type Nos. 105074, 105075, 105570, 105571, 105572, 105577, 105850, 105851. Includes: <b>92707</b> Terminal – Shielding <b>293156</b> Cable – Ignition Used on type Nos. 105566, 105574. Includes: <b>92707</b> Terminal – Shielding	<b>293064</b> Pipe – Fuel – 7½" long Used on type Nos. 105099, 105136, 105172, 105188, 105826, 105866, 105878. <b>293203</b> Pipe – Fuel – 14½" long Used on type Nos. 105084, 105591, 105619. <b>293250</b> Pipe – Fuel – 12¼" long Used on type Nos. 105103, 105109, 105120, 105128, 105141, 105586, 105590, 105593, 105595, 105860, 106024, 106523, 106526, 106529, 106531, 106534, 106536, 106539, 106546, 106548. <b>293392</b> Pipe – Fuel – 11" long Used on type Nos. 105121, 105604, 105605. The following Fuel Pipes and Fittings used on type Nos. 105050, 105094, 105127, 105140, 105153, 105171, 105553, 105555, 105559, 105563, 105576, 105580, 105589, 105609, 105835, 105862, 105887, 106532, 106545. <b>92713</b> Coupling <b>99511</b> Tee <b>292486</b> Wing Plug, Chain and Clip Assembly <b>292908</b> Pipe – Fuel (Short) <b>292909</b> Pipe – Fuel (Long) The following Fuel Pipes and fittings used on type No. 106549: <b>92713</b> Coupling <b>99511</b> Tee <b>292486</b> Wing Plug, Chain and Clip Assembly <b>294731</b> Pipe – Fuel (Long) <b>294747</b> Pipe – Fuel (Short) The following fuel pipe and fittings used on type No. 105901: <b>293521</b> Pipe – Fuel <b>293059</b> Cap Assembly – Elbow <b>292370</b> Valve – Fuel Shut-Off <b>93013</b> Connector – Fuel Pipe <b>92953</b> Elbow – 90° (at lower shut-off valve outlet) <b>293562</b> Pipe – Fuel – 7½" long Used on type No. 106030. <b>293776</b> Pipe – Fuel – 11" long Used on type No. 105024. <b>294184</b> Pipe – Fuel – 14½" long Used on type No. 105211. <b>295050</b> Pipe – Fuel Used on type Nos. 105106,	105180, 105189, 105193, 105204. Uses: <b>230317</b> Connector (at tank valve) <b>230318</b> Connector (at carburetor) † <b>292681</b> Valve Assembly – Carburetor Idle <b>292797</b> Outlet – Fuel Tank (includes strainer) <b>292920</b> Control – Throttle <b>Note:</b> <b>293009</b> Control – Throttle Used on type Nos. 105092, 105119, 105194, 105549. <b>292932</b> Thermostat Assembly <b>292934</b> Magneto Assembly <b>Note:</b> <b>292935</b> Magneto Assembly Used on type Nos. 105021, 105026, 105031, 105051, 105076, 105091, 105097, 105107, 105127, 105191, 105203, 105534, 105535, 105536, 105561, 105601, 105607, 105854, 105876. Includes: <b>66155</b> Wire – Ground <b>292936</b> Magneto Assembly Used on type Nos. 105169, 105210, 105526, 105528, 105531, 105552, 105565, 105575, 105583, 105614, 105615, 105617, 105624. Includes: <b>292042</b> Wire – Ground <b>292937</b> Magneto Assembly Used on type Nos. 105558, 105586. <b>292938</b> Magneto Assembly Used on type Nos. 106010, 106011, 106017, 106021, 106022, 106023, 106024, 106025, 106026, 106027, 106030, 106032, 106034, 106035, 106510, 106511, 106517, 106544, 106545, 106547. <b>292939</b> Magneto Assembly Used on type Nos. 106031, 106033, 106521, 106522, 106523, 106524, 106525, 106526, 106527, 106528, 106529, 106530, 106531, 106532, 106534, 106535, 106536, 106537, 106541, 106543, 106546, 106548, 106549. Includes: <b>292042</b> Wire – Ground <b>292975</b> Magneto Assembly Used on type Nos. 105078, 105184, 105557, 105865, 105872, 105888. <b>292980</b> Magneto Assembly Used on type No. 105182. Includes: <b>292042</b> Wire – Ground <b>292981</b> Magneto Assembly Used on type No. 106539. Includes: <b>292042</b> Wire – Ground <b>293047</b> Magneto Assembly		
<b>292271</b> Ratchet – Recoil Starter <b>292272</b> Pulley – Recoil Starter <b>292330</b> Control – Governor <b>Note:</b> <b>293336</b> Control – Top Speed Limit Used on type Nos. 105029, 105057, 105106, 105108, 105125, 105148, 105149, 105180, 105200, 105204, 105205, 105208, 105209, 105855. <b>294020</b> Control – Top Speed Limit Used on type No. 105169. <b>292661</b> Pipe – Fuel – 11" long <b>Note:</b> <b>68049</b> Pipe – Fuel – 36" long Used on type No. 105130. <b>89663</b> Pipe – Fuel – 11½" long Used on type No. 105855. <b>99738</b> Pipe – Fuel – 13¾" long Used on type Nos. 105854, 105859, 105860. <b>291045</b> Pipe – Fuel – 10¼" long Used between carburetor and fuel pump on type Nos. 105554, 106547. <b>291288</b> Pipe – Fuel – 8⅜" long Used on type No. 105572. <b>293055</b> Pipe – Fuel – 7½" long Used on type Nos. 105041, 105046, 105059, 105061, 105067, 105068, 105069, 105073, 105085, 105088, 105104, 105110, 105118, 105122, 105129, 105135, 105137, 105142, 105143, 105145, 105174, 105183, 105184, 105185, 105836, 105877, 106035.					

†Included in Carburetor Overhaul Kit – Part No. 291691.

†Included in Carburetor Overhaul Kit – Part No. 291691.

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
	Used on type Nos. 105566, 105574. Includes: <b>292042</b> Wire – Ground <b>293153</b> Magneto Assembly Used on type No. 105570. Includes: <b>292042</b> Wire – Ground <b>292190</b> Brush Assembly – Flywheel Grounding Uses: <b>292155</b> Brush <b>90050</b> Screw (Brush Lead) <b>92181</b> Washer – Lock (Brush Lead) <b>90923</b> Screw (For Mounting Brush Assembly) <b>293157</b> Magneto Assembly Used on type Nos. 105074, 105075, 105572, 105850, 105851. Includes: <b>292042</b> Wire – Ground <b>293238</b> Magneto Assembly Used on type Nos. 105083, 105086, 105112, 105116, 105117, 105164, 105167, 105197, 105598, 105603, 105606, 105610, 105612, 105618, 105623, 105899, 105901. Includes: <b>292042</b> Wire – Ground <b>293268</b> Magneto Assembly Used on type No. 105571. Includes: <b>292042</b> Wire – Ground <b>293316</b> Magneto Assembly Used on type No. 105096. <b>294391</b> Magneto Assembly Used on type No. 105622. Includes: <b>292042</b> Wire – Ground <b>292940</b> Plate – Magneto <b>Note:</b> <b>292941</b> Plate – Magneto Used on type Nos. 105021, 105026, 105031, 105051, 105076, 105091, 105097, 105107, 105127, 105191, 105203, 105534, 105535, 105536, 105561, 105601, 105607, 105854, 105876.	<b>292942</b> Plate – Magneto Used on type Nos. 105558, 105571, 105586, 105622. <b>292943</b> Blade – Governor <b>Note:</b> <b>293152</b> Blade – Governor Used on type No. 105570. Uses: <b>90923</b> Screw (For Governor Blade Ground Wire) <b>292944</b> Tank Assembly – Fuel <b>Note:</b> <b>290816</b> Tank Assembly – Fuel Used on type No. 105130. <b>291286</b> Tank Assembly – Fuel Used on type Nos. 105564, 105568. <b>291420</b> Tank Assembly – Fuel Used on type No. 106022. <b>291579</b> Tank Assembly – Fuel Used on type No. 105572. <b>292415</b> Tank Assembly – Fuel Used on type No. 105622. (Mounting parts for above tanks, except No. 292944, are supplied by equipment manufacturer). <b>292945</b> Tank Assembly – Fuel Used on type Nos. 105036, 105037, 105038, 105042, 105067, 105083, 105128, 105552, 105574, 105583, 105588, 105590, 105591, 105598, 105603, 105614, 105619, 105854, 105859, 105889, 105900, 106024, 106521, 106522, 106523, 106524, 106528, 106531, 106537, 106543. <b>293038</b> Tank Assembly – Fuel Used on type Nos. 105566, 105570, 105623. <b>293130</b> Tank Assembly – Fuel Used on type No. 105571. <b>293134</b> Tank Assembly – Fuel Used on type No. 105558. <b>294692</b> Tank Assembly – Fuel Used on type No. 105901. Uses: <b>91249</b> Plug – Drain <b>293007</b> Strainer – Fuel <b>292963</b> Control – Governor <b>293194</b> Bracket and Tube – Thermostat <b>293204</b> Wire – Ground – 43" long <b>Note:</b> <b>293212</b> Wire – Ground – 36" long Used on type Nos. 105083,	105169, 105182, 106031, 106033, 106524, 106526, 106536, 106539, 106548. <b>293214</b> Wire – Ground – 48" long Used on type No. 105074. <b>293285</b> Wire – Ground – 9" long Used on type Nos. 105116, 105197. <b>293432</b> Starter Pulley with Screen <b>293477</b> Float – Carburetor <b>Note:</b> <b>99622</b> Float – Carburetor Used on engines before Serial No. 298439. † <b>293478</b> Valve and Seat – Fuel Inlet <b>Note:</b> <b>99636</b> Valve and Seat – Fuel Inlet Used on engines before Serial No. 298439. <b>293515</b> Body – Lower Carburetor <b>293517</b> Cleaner Assembly – Air (Used only with No. 294075 series carburetors) <b>293578</b> Clutch Assembly – Recoil Starter <b>293642</b> Housing – Blower and Starter (For Recoil Starter) <b>Note:</b> <b>293800</b> Housing – Blower and Starter (For Recoil Starter) Used on type No. 105617. <b>294172</b> Housing – Blower and Starter (For Recoil Starter) Used on type Nos. 105212, 105894. <b>293934</b> Valve Assembly – Fuel Shut-Off <b>293991</b> Bowl – Air Cleaner <b>294075</b> Carburetor Assembly (with integral air cleaner elbow) Used on engines after Serial No. 493492. <b>Note:</b> <b>294089</b> Carburetor Assembly Used after Serial No. 493492 on type Nos. 105050, 105094, 105127, 105553, 105555, 105559, 105563, 105576, 105580, 105589, 105609, 105835, 105862. <b>294090</b> Carburetor Assembly Used after Serial No. 493492 on type No. 105554.		

† Included in Carburetor Overhaul Kit – Part No. 291691

† Included in Carburetor Overhaul Kit – Part No. 291691.